


# Trusar

SIGNATURE MOTORS AND ELECTRONICS

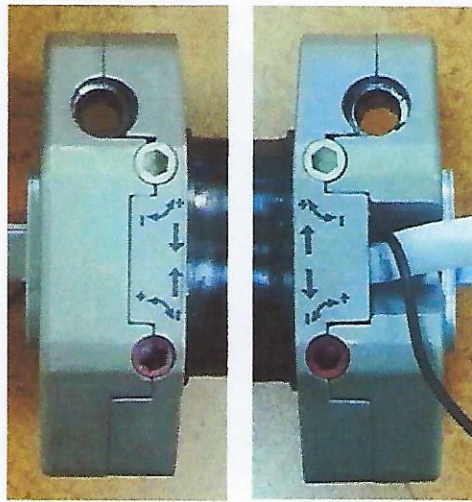

Motor LEFT

Motor RIGHT

## LIMIT SETTING INSTRUCTIONS ON TRS45RM RADIO OVERRIDE MOTORS

 


\*\*Arrows depict tube rotation not upper and lower limit

\*\*Do not rotate micro-limit adjustments while motor is not powered




\*\*A hand held remote or wireless wall switch must be linked to the motor before setting limits

### MOTOR ON RIGHT - LOOKING AT THE FRONT OF THE UNIT

#### Setting lower limit




1. Insert the limit tool into  the micro-limit adjustment slot
2. Press and release down on the control
3. Quickly turn limit tool **counter-clockwise** toward the - until motor stops 
  - If motor doesn't stop before lower limit, press stop and run product up and repeat #2 & #3
4. Now slowly turn **clockwise** toward the + until desired lower limit is reached 
5. Press and release stop on the control

#### Setting upper limit




1. Insert the limit tool into the  micro-limit adjustment slot
2. Press and release up on the control
3. Quickly turn limit tool **counter-clockwise** toward the - until motor stops 
  - If motor doesn't stop before lower limit, press stop and run product up and repeat #2 & #3
4. Now slowly turn **clockwise** toward the + until desired upper limit is reached 
5. Press and release stop on the control

### MOTOR ON LEFT - LOOKING AT THE FRONT OF THE UNIT

#### Setting lower limit

1. Insert the limit tool into  the micro-limit adjustment slot
2. Press and release down on the control
3. Quickly turn limit tool **clockwise** toward the - until motor stops 
  - If motor doesn't stop before lower limit, press stop and run product up and repeat #2 & #3
4. Now slowly turn **counter-clockwise** toward the + until desired lower limit is reached 
5. Press and release stop on the control

#### Setting upper limit

1. Insert the limit tool into the  micro-limit adjustment slot
2. Press and release up on the control
3. Quickly turn limit tool **clockwise** toward the - until motor stops 
  - If motor doesn't stop before lower limit, press stop and run product up and repeat #2 & #3
4. Now slowly turn **counter-clockwise** toward the + until desired upper limit is reached 
5. Press and release stop on the control

\*\*Please instruct the client that using the manual interior crank may cause the shutter to retract